




180W Moving Head Beam

SI-056

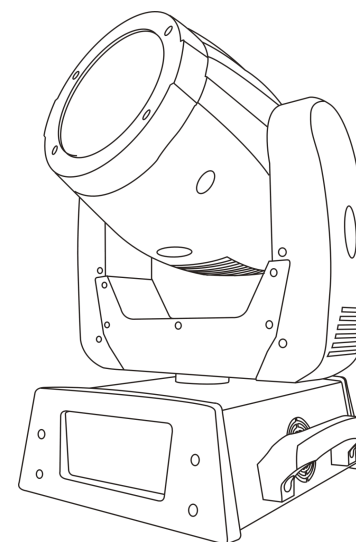

User Manual

KEEP THIS MANUAL FOR FUTURE NEEDS

1. Unpacking

Thank you for Color Imagination's 180W Moving Head Beam. For your own safety, please read this manual before installing the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual well for future needs.

Color Imagination's 180W Moving Head Beam is made of a new type of high temperature strength of engineering plastics and cast aluminum casing with nice outlook. The fixture is designed and manufactured strictly following CE standards, complying with international standard DMX512 protocol. It's available independently controlled and linkable with each other for operation. And it is applicable for large-scale live performances, theater, studio, nightclubs and discos.

SI-056 adopts powerful Osram SIRIUS HRI 180W lamp with revolutionary technology which features high brightness and stability. Please carefully unpack it when you receive the fixture and check whether it is damaged during the transportation. And please check whether the following items are included inside the box:

Moving Head-----one	Signal Cable----one
Omega Clamp-----Two	User Manual----one
Safety Chain-----One	

13. Maintenance and Cleaning

The following points have to be considered during the inspection:

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION!

Disconnect from mains before starting maintenance operation.

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.


- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.


There are no serviceable parts inside the device. Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine parts from your local dealer.

11. Product Dimensions

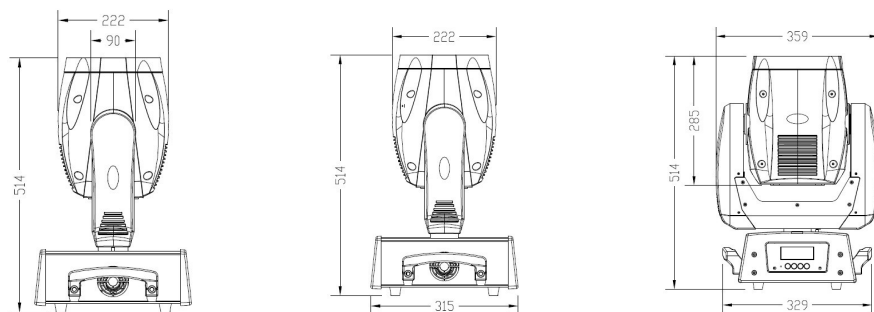

12. Product Overviews

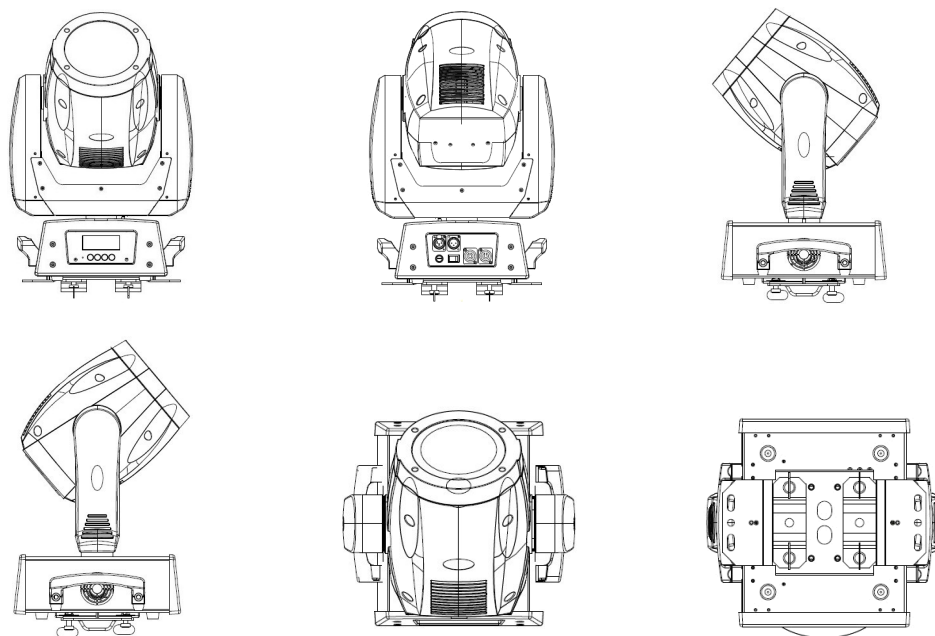

2. Safety Instructions



CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

The device shall only be used with rated voltage and frequency.

Make sure that the available voltage is not higher than stated at the end of this manual.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

Fixtures cannot be installed on combustible substances, keep more than 50cm distance with wall for smooth air flow, so there should be no shelter for fans and ventilation for heat radiation.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

3. Operation Instructions

- The moving head is for beam effect for onsite decoration purpose.
- Don't turn on the fixture if it's been through severe temperature difference like after transportation because it might damage the light due to the environment changes. So make sure to operate the fixture until it is in normal temperature.
- This light should be keep away from strong shaking during any transportation or movement.
- Don't pull up the light by only the head, or it might cause damages to the mechanical parts.
- Don't expose the fixture in overheat, moisture or environment with too much dust when installing it. And don't lay any power cables on the floor. Or it might cause electronic shock to the people.
- Make sure the installation place is in good safety condition before installing the fixture.
- Make sure to put the safety chain and check whether the screws are screwed properly when installing the fixture.
- Make sure the lens are in good condition. It's recommended to replace the units if there are any damages or severe scratch.
- Make sure the fixture is operated by qualified personnel who knows the fixture before using.
- Keep the original packages if any second shipment is needed.
- Don't try to change the fixtures without any instruction by the manufacturer or the appointed repairing agencies.
- It is not in warranty range if there are any malfunctions from not following the user manual to operate or any illegal operation, like shock short circuit, electronic shock, lamp broke, etc.

4. Mounting and Installation

Cautions: For added protection mount the fixtures in areas outside walking paths, seating areas, or in areas where the fixture might be reached by unauthorized personnel.

Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.

Never stand directly below the device when mounting, removing, or servicing the fixture.

Other DMX modes available

Customizable DMX channel assignment

DMX, stand-alone, master/slave, sound activated mode

DMX recorder and edit function integrated

Software update

3-pin or 5-Pin XLR serial input/output

Fan cooling system

Constant temperature readout / management function

DB rating @ 1M = 54,18db

2 x 1/4 turn fastening Omega Clamps

Electronic ballast and power supply

10. Technical Specifications

Input Voltage: AC 100V ~ 240V 50/60Hz

Light Source: 1* Osram SIRIUS HRI 180W lamp

Control Signal: DMX512, master-slave and sound activated or auto operation

Control Channel: 14 DMX Channels

Power Consumption: 342W

Dimensions: 315x359x514mm

Packing Dimensions: 620*430*415mm

Net Weight: 15kg

Gross Weight: 18kg

9. Key Features

2000 hour rated lamp source
Osram SIRIUS HRI 180W lamp (8400lumen, 7500° K, 2000h) included
59320 Lux @ 2,5m
2,5° beam angle
No need for adjustment of reflector or lamp
Anti-reflection lenses
1 color wheel with total 13 colors plus open
Variable direction rainbow effect with speed adjustable
1 rotatable gobo wheels with 12 rotatable, indexable and interchangeable gobos plus open
Variable speed gobo scrolling in both directions
12.0mm outside, 8mm image diameter (Gobo Size)
1 rotatable and indexable 8-facet prism with speed adjustable and variable direction
Macro-function for rotatable gobo/prism combinations
Variable Frost Filter (Hybrid effect for Wash)
Dual flag mechanical dimming system
Variable speed strobe effect
Preset variable/random strobe and dimming pulse effects
Motor driven focus from near to far
540° /630° PAN and 265° TILT movement
Automatic Pan / Tilt position correction
16 bit smooth and precise resolution for PAN/TILT movement
Motors for fast and accurate Pan / Tilt positioning
Vector Mode with blackout MIB function
Blue LCD Display
14 DMX channels USITT DMX-512 (16-bit resolution)


from a ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5 ft) away from any flammable materials (decoration etc.).

Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Mounting points: Overhead mounting requires extensive experience, including amongst others calculating working load limits, a fine knowledge of the installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.

Clamp Mounting: The Beam provides two unique mounting bracket assemblys that integrates the bottom of the base, the included "Omega Bracket," and the safety cable rigging point in one unit (see the illustration below). When mounting this fixture to truss be sure to secure an appropriately rated clamp to the included omega bracket using a M10 screw fitted through the center hole of the "omega bracket". As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly.

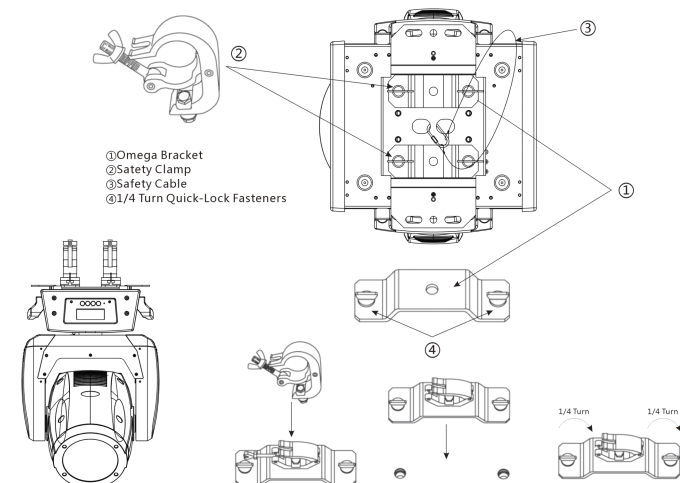


Regardless of the rigging option you choose for your BEAM, always be sure to secure your fixture with a safety cable. The fixture provides a built-in rigging point for a safety cable on the hanging bracket as illustrated above. Be sure to only use the designated rigging point for the safety cable and never secure a safety cable to a carrying handle.

5. DMX-512 control connections


Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. You can chain multiple moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors.

Please refer to the diagram below.

DMX-512 connection with DMX terminator

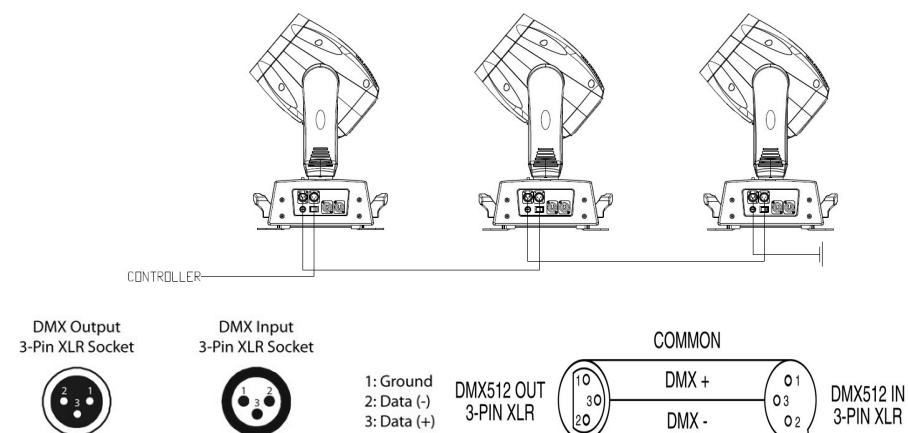

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

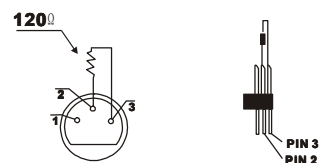

				224-255	Shutter open
9	7	2	Dimmer	0-255	0-100% Linear dimmer
10	8	6	Focus	0-255	In(near) to out(far)
11	9	7	Rotating prism, Prism, Gobo macros	0-005	OFF
				006-127	ON
				128-189	Forwards rotation from fast to slow
				190-193	Prism rotation stop
12	10	8	Frost	194-255	Backwards rotation from slow to fast
				0-099	Frost off
13	11	11	Speed Pan/Tilt	100-255	Frost on
				0-225	Max to min speed
				226-235	Blackout by movement
				236-245	Blackout by all wheel changing
14	12	12	Special	246-255	No function
				0-019	No function
				020-029	No function
				030-039	No function
				040-059	Lamp on
				060-079	Lamp switch off
				080-099	Motor reset
				100-119	Internal program 1
				120-139	Internal program 2
				140-159	Internal program 3
				160-179	Internal program 4
				180-199	Internal program 5
				200-219	Internal program 6
				220-239	Internal program 7
				240-255	Internal program 8


6	4	4	Gobo 1	048-055	Gobo 6
				056-063	Gobo 7
				064-071	Gobo 8
				072-079	Gobo 9
				080-087	Gobo 10
				088-095	Gobo 11
				096-103	Gobo 12
				104-111	Gobo 1 shake from slow to fast
				112-119	Gobo 2 shake from slow to fast
				120-127	Gobo 3 shake from slow to fast
				128-135	Gobo 4 shake from slow to fast
				136-143	Gobo 5 shake from slow to fast
				144-151	Gobo 6 shake from slow to fast
				152-159	Gobo 7 shake from slow to fast
				160-167	Gobo 8 shake from slow to fast
				168-175	Gobo 9 shake from slow to fast
				176-183	Gobo 10 shake from slow to fast
				184-191	Gobo 11 shake from slow to fast
				192-199	Gobo 12 shake from slow to fast
				200-255	Rot. gobo wheel cont. rotation from slow to fast
7	5	5	Gobo 1 rotation	0-003	Gobo rotation stop
				004-127	Forwards gobo rotation from fast to slow
				128-131	Gobo rotation stop
				132-255	Backwards gobo rotation from slow to fast
8	6	1	Shutter, Strobe	0-031	Shutter closed
				032-063	Shutter open
				064-095	Strobe effect slow to fast
				096-127	Shutter open
				128-159	Pulse strobe effect in sequences from slow to fast
				160-191	Shutter open
				192-223	Random strobe effect from slow to fast

6. Menu Operations

Function Mode	DMX Address	A001~AXXX		
	Set to slave			
	Auto Run	Internal Program1~8	Master/Alone	
	Music Control	Internal Program1~8	Master/Alone	
Reset	On/Off			
Reverse Pan	On/Off			
Reverse Tilt	On/Off			
Mic sensitivity	0~99%			Sensitivity of mic
Special	Reset Default	On/Off		
	Calibration	Code (Password: 088)		
		PAN, TILT, Color Wheel, Gobo Wheel 1, Gobo Wheel 2, Focus		
	Temperature	XXX℃/°F		
	Manual Control	Lamp	On/Off	
		Channel	PAN=XXX.....	
	Signal Set	Wire DMX		
		Wireless DMX		
		Act WDMX & Out		
Edit Program	Program1	Steps(1..48)		
	...	Scenes 01	Pan=XXX...	
	Program8	
Mode of channel	Mode Set	16Bit Mode		
		8Bit Mode		
		Design Mode		
	Design	Max Channel = XX		
	Mode Set	PAN = 001		
		...		

Information	Lamp Hours	XXXX(Hours)	
	Clear Lamp Time	On/Off	
	Software Version	V1.0~V9.9	

7. Photometric Data

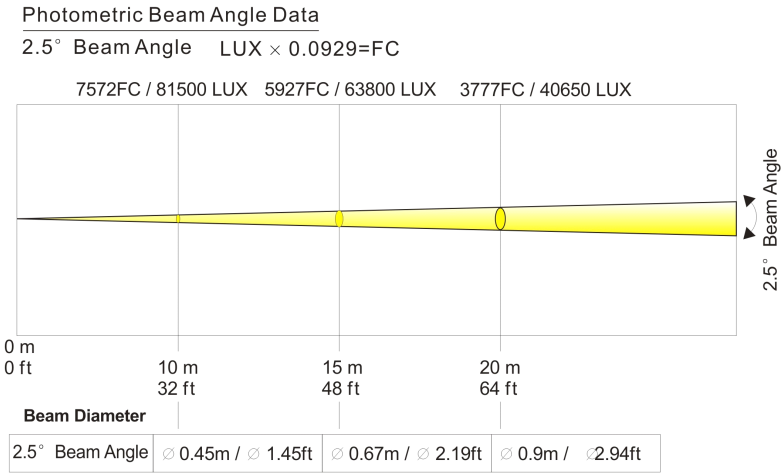

8.DMX Channels

Mode/Channel			Function	Values	Description
16B	8B	DE			
1	1	9	Pan	0-255	PAN Movement
2			Pan Fine	0-255	Fine control of Pan movement
3	2	10	Tilt	0-255	Tilt Movement
4			Tilt Fine	0-255	Fine control of Tilt movement
5	3	3	Color	0-008	Open/White
				009-017	Color 1
				018-026	Color 2
				027-035	Color 3
				036-044	Color 4
				045-052	Color 5
				053-061	Color 6
				062-070	Color 7
				071-079	Color 8
				080-088	Color 9
				089-096	Color 10
				097-105	Color 11
				106-114	Color 12
				115-127	Color 13
				128-189	Forwards rainbow effect from fast to slow
				190-193	Color rotation stop
				194-255	Backwards rainbow effect from slow to fast
				0-007	Open
				008-015	Gobo 1
				016-023	Gobo 2
				024-031	Gobo 3
				032-039	Gobo 4
				040-047	Gobo 5